


**Beeperless Answering System  
With Integrated Telephone**

# **MESSAGE PHONE OWNER'S MANUAL**

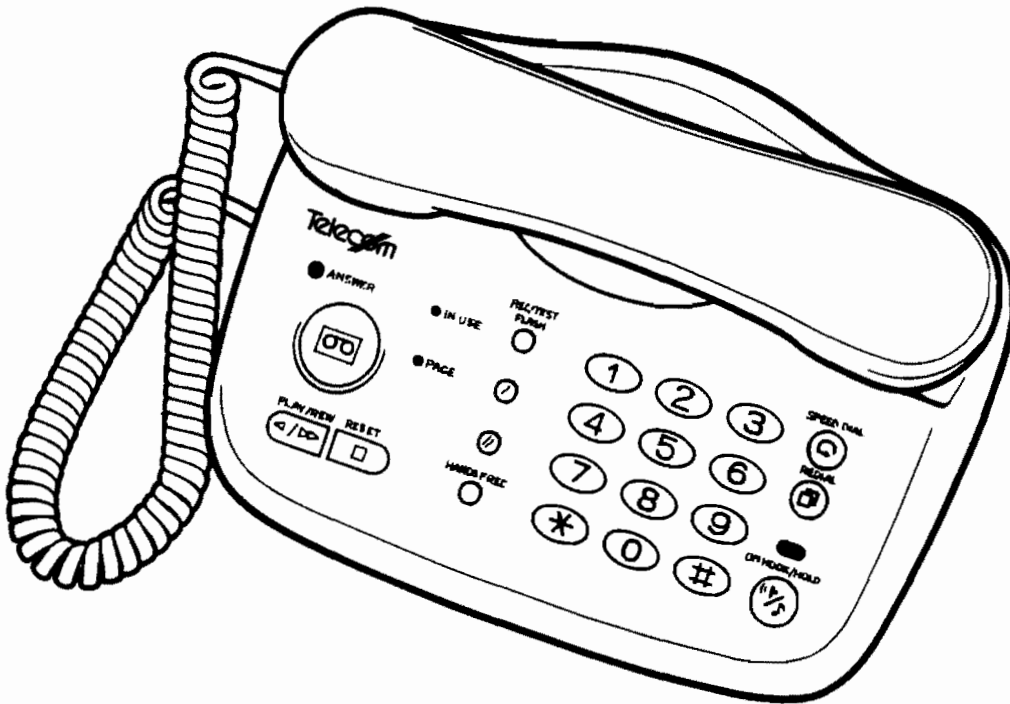


**Telecom**

## CONTENTS


1. FEATURES	1
2. SELECTING A LOCATION	3
3. INSTALLATION	4
4. PROGRAMMING	6
5. ANSWERING OPERATION	9
6. REMOTE CONTROL OPERATION	15
7. AUTO-PAGING OPERATION	18
8. TELEPHONE OPERATION	19

## MAJOR PARTS


### Front view

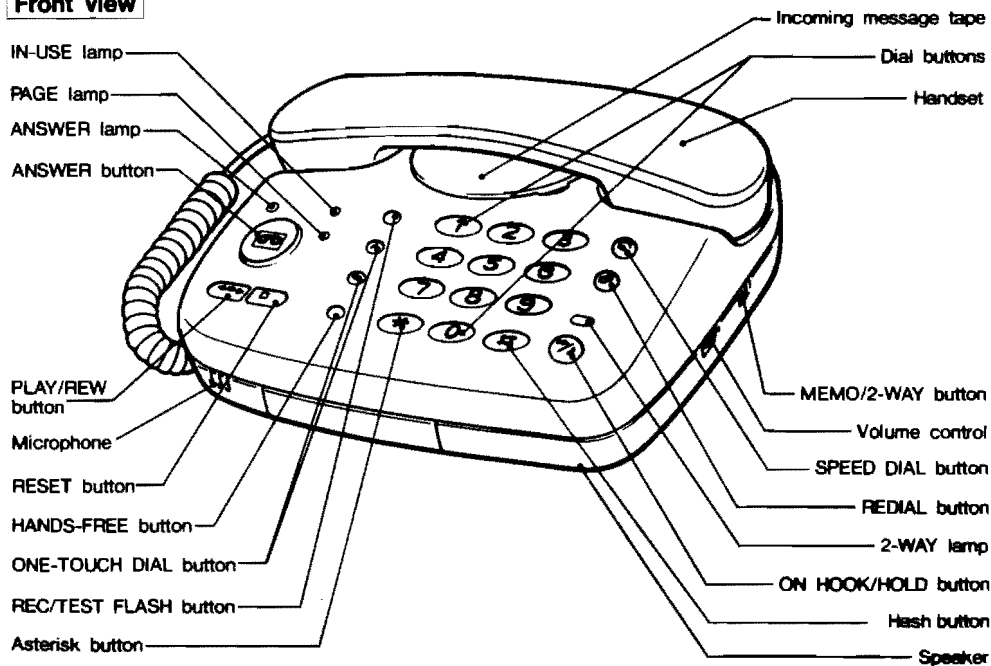

### Rear view

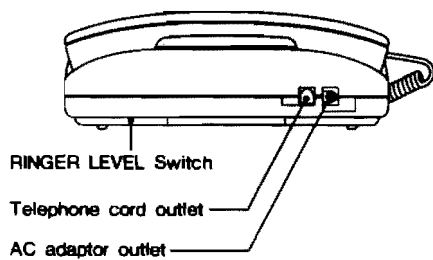

### Bottom view

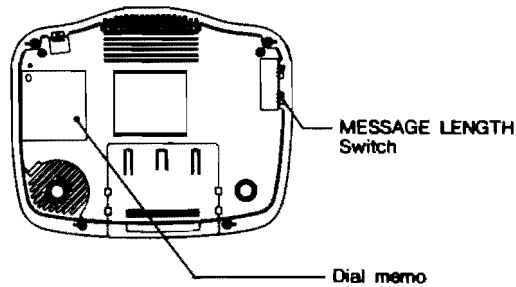

## FEATURES

---

### 1. FEATURES

#### AUTOMATIC ANSWERING SYSTEM FEATURES

1. Recordable "OGM" Voice Memory Chip: Record your own outgoing announcement on a Digital Voice Memory Chip with a capacity of up to 16 seconds.
2. Microcassette Tape for "ICM": Your incoming message will be recorded onto the Microcassette Tape (MC-60) for up to thirty minutes.
3. Variable Length of "OG" Announcement: A "beep" sounds at end of your announcement, whatever the length.
4. Auto-Paging: Everytime you receive a message, the built-in Auto -Paging function dials your pager or telephone number (up to a 36-digit number, tone/pulse capacity, programmable pause in the dialing sequence). Automatic redial up to three times in fifteen-minute intervals until you retrieve the message.
5. Beeperless Remote Control: Wherever you are, you can get your message using any "Touch Tone" phone.

There are many remote control features available such as:

- \* Answer ON/OFF
  - \* Message Playback  
(Rewinds the message tape to the messages you haven't retrieved and plays them back.)
  - \* Message Rewind
  - \* Message Erase
  - \* "OGM" Recording
  - \* Auto-Paging ON/OFF
  - \* Memo Recording
6. One-Touch Playback: Rewinds to the beginning, plays back all your messages, stops and automatically resets itself for the next call.
  7. Voice-Activated Recording: Listen only to your caller's messages, not annoying gaps or busy signals on the tape.
  8. Personal Memo Recording: Leave messages for family or associates.
  9. Toll Saver: When you call in, the MessagePhone will answer on the first ring if you have any messages. If you hear two rings, hang up and save the cost of a call.
  10. Programmable Security Code: In order to prevent unauthorized retrieval of messages, the MessagePhone has a programmable security coding system (a 3-digit code).
  11. Call Monitor: You can identify the caller before you answer the phone.
  12. Two-Way Conversation Recording: Conversation can be recorded while talking with another party.

## FEATURES

---

13. **Auto-Disconnect:** By picking up the handset you can talk with the caller and the MessagePhone will automatically stop recording.
14. **CPC ON/OFF Switch:** The MessagePhone disconnects automatically when the caller hangs up.
15. **Built-In Condenser Microphone:** Records your announcement or memo without extra wiring.


### TELEPHONE SYSTEM FEATURES

1. **Tone:** The MessagePhone is compatible with Touch Tone Lines. It's also compatible with computer-accessed services.
2. **Last Number Redial:** Automatically redials the last telephone number dialed at the touch of a button.
3. **One-Touch Dialing / Speed Dialing:** Store two telephone numbers of up to thirty-six digits. Stores ten telephone numbers of up to thirty-two digits.
4. **Hands Free Conversation:** You can enjoy your telephone conversation in private without lifting the handset just by using a small earphone.
5. **On-Hook Dialing:** You can dial without picking up the handset.
6. **Flash Button:** Allows you to activate "Call Waiting" service. You'll never accidentally disconnect a caller again.
7. **Music-On-Hold With LED:** Transmits a built-in music chime and the LED glows red while a caller is on hold.

## SELECTING A LOCATION

### 2. SELECTING A LOCATION


Select a location for the MessagePhone that is flat, solid and convenient to a telephone jack and an AC outlet. Place the MessagePhone in a location that does not have the following conditions:

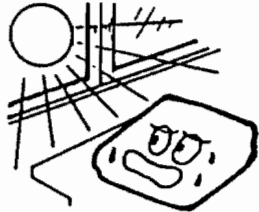


direct sunshine




extreme cold

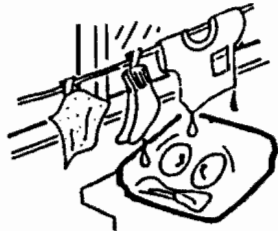


high humidity

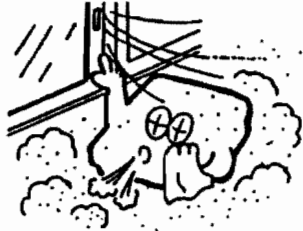

dust or dirt

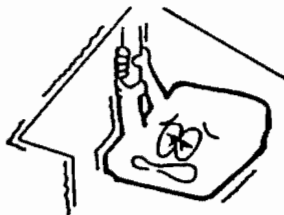

vibration

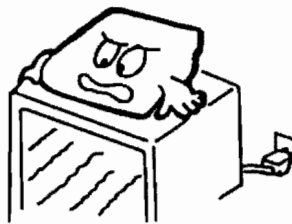

magnetized




high heat


## INSTALLATION

### 3. INSTALLATION

#### CONNECTING THE HANDSET

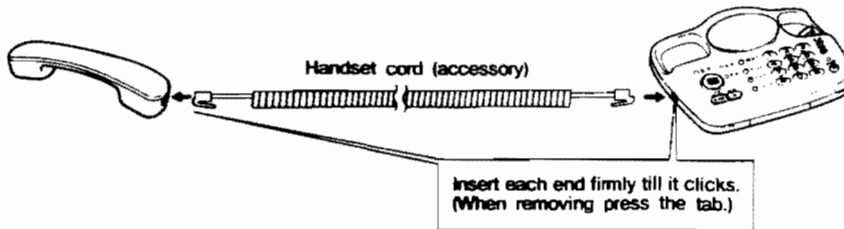


#### CONNECTING TO THE TELEPHONE LINE AND THE AC OUTLET

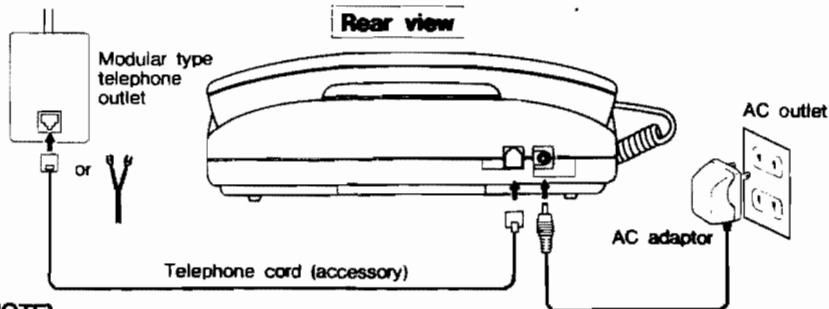

#### (NOTE)

- A. Just insert the modular plug of the MessagePhone into a standard modular jack (if available) of line terminal.
- B. If the line has no modular jack, you can ask nearby phone company or your dealer.
- C. You must use the original AC Adaptor which comes with the MessagePhone. Please do not use any other adaptor which may not be suitable for the MessagePhone.


#### SETTING THE SWITCHES

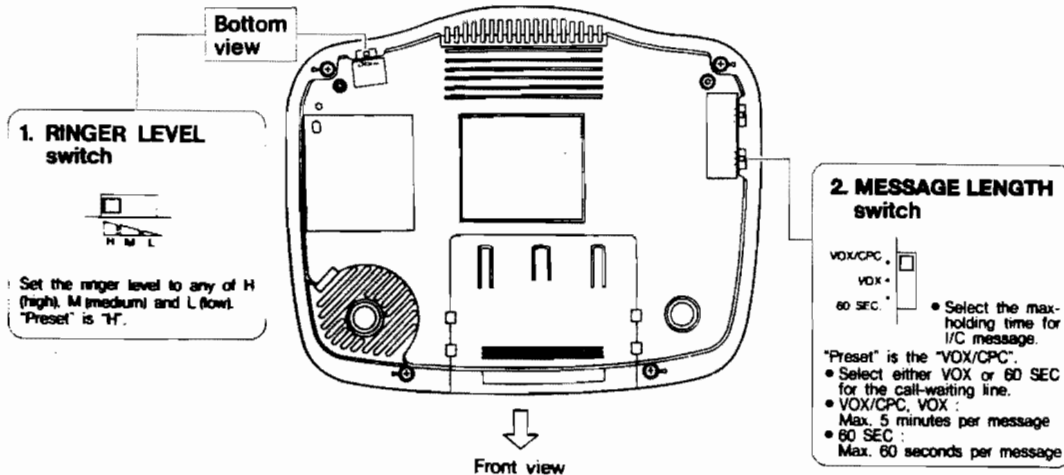


## INSTALLATION

### INSTALLATION OF THE CASSETTE


Your MessagePhone is supplied with a microcassette tape for the incoming message tape. Take up any slack in your cassette before installation. Rotate the tape reel with a pencil, as shown in the figure.

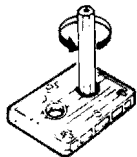

1. Pick up the handset and open the cassette compartment cover.

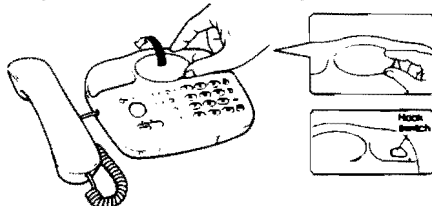

2. Push the microcassette back deeply and press the front part down placing the recording side up.

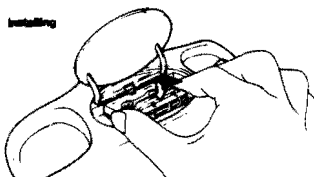

#### (NOTE)

- A. Replace the incoming tape at least once every 6-months or more often if heavily used.
- B. A longer tape (MC-90) or Metal or Chrome (CrO<sub>2</sub>) tape can be not used with the MessagePhone.
- C. Even if the eraser protection tag is taken off, new recordings will erase the old messages on the tape.
- D. Clean the recording heads and/or pinch roller to keep good sound quality. Rub the front surface of the head and/or pinch roller with a Q-tip moistened with denatured alcohol or use a head cleaner whenever you feel the voice or sound is not clear or distorted or shaken.

**4. PROGRAMMING**

**STORE THE SECURITY CODE**

The security code prevents unauthorized persons from controlling your MessagePhone. Also, no remote operation is allowed until the proper code is entered. If the code is correct, the MessagePhone will accept your remote commands. If it is not correct, the MessagePhone continues its normal answer functions but will not respond to remote commands.

Before you play with the remote control feature, you must program the 3-digit (000-999) remote control security code number.

1. Press the RESET button.



2. Press the # button.



3. Press the SPEED DIAL button.

 


- \* You will hear a beep.
- \* The ON-HOOK lamp will flash.

4. Press the \* button after the beep sounds.



5. Press the Dial buttons corresponding to your 3-digit security code number.

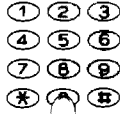

6. Press the SPEED Dial button.



- \* You will hear a beep.
- \* The ON-HOOK lamp will turn off.

**(NOTE)**

- A. The security code number should be composed of 3 digits.
- B. If you mis-program or change your security code, return to Step 1 and repeat the above steps (1-6).
- C. If you do not press any button within 10 seconds while the ON-HOOK lamp is flashing, the ON-HOOK lamp will turn off and release the existing mode. If this happens, start over again from Step 1.
- D. A long power loss to the MessagePhone may cause the security code program to be lost.
- E. The programming will not function if you are talking on the telephone.


## PROGRAMMING

### TESTING THE PROGRAMMED SECURITY CODE

1. Press the ANSWER button.




2. Dial your security code. If a long beep tone is heard, it assures you that the programming is correct.

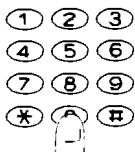


### PROGRAMMING THE TELEPHONE NUMBERS IN THE MEMORY STATION

You can store 10 telephone numbers for the SPEED DIAL, 2 telephone numbers for the ONE-TOUCH DIAL and 1 telephone number for the AUTO-PAGING.

 1. Press the RESET button.

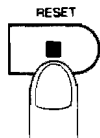

 2. Press # button.

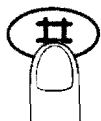

3. Press the SPEED DIAL button. You will hear a beep tone and ON-HOOK lamp will flash.



4. Press the DIAL button ( 0-9, / , // ) as a memory station number for speed dialing.

#### (NOTE)

For the SPEED DIAL, use the DIAL buttons 1-9. (Up to 32 digits for each telephone number)

For the ONE-TOUCH DIAL, use the I and II buttons. (Up to 36 digits)

For the AUTO-PAGING, use the # button. (UP to 32 digits)

5. Press the DIAL buttons to enter the telephone number to be stored.
6. Press the SPEED DIAL button to lock the information into the memory station. You will hear a beep tone and the ON-HOOK lamp will turn off.

## PROGRAMMING

---

**Example:**

To program the telephone number (714)345-6789 into the SPEED DIAL memory station number 1, press the button in the following sequence:

RESET button # SPEED DIAL button 1 7 1 4 3 4  
5 6 7 8 9 SPEED DIAL button

If you need to place a pause in the dialing sequence, such as may be necessary when using on a PABX system, enter a pause between the digit(s) and the telephone number by pressing the REDIAL button for pause.

To program outside line access number 9 and telephone number (714)987-6543 into the SPEED DIAL memory station number 3.

RESET button # SPEED DIAL button 3 9 REDIAL button  
7 1 4 9 8 7 6 5 4 3 SPEED DIAL button

**(NOTE)**

- A. In case you mis-programmed or want to change the programming, return to Step 1 and repeat steps 1 to 6. (The previous programmed number will automatically erase.)
- B. The programmed number may erase if there is a loss of power to the MessagePhone.
- C. If you do not use the Auto-Page function, you can program another telephone number in the paging memory station #.
- D. If the telephone number is longer than 32 digits, it is necessary to use two separate memory stations.
- E. If you do not use a Pocket Pager, you can program other telephone numbers in the paging memory station.
- F. For your quick reference, you should note the telephone numbers and related speed dial numbers in the attached card and keep it in the card pocket underneath the MessagePhone.

**(NOTE)**

**Memory Battery Backup**

 
In order to backup the inside memory at a power failure, the MessagePhone has a built-in rechargeable battery. The term of backing up the memory is 1 hour with full charge.

## 5. ANSWERING OPERATION



### RECORDING YOUR OUTGOING ANNOUNCEMENT AND ITS PLAYBACK

Your message may be any length up to 32 seconds.  
We suggest that you practice your message before you try recording.

1. Press the RESET button before you start recording.

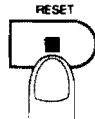

2. Press and hold the REC/TEST FLASH button for about 3 seconds until you hear a beep. Speak your message slowly and clearly into the Microphone.

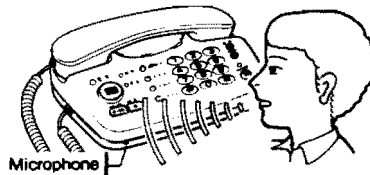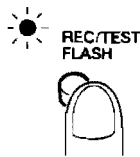

**(NOTE)**

Your mouth should be 8 inches from the MIC. During recording, the IN USE lamp will stay lit.

3. When you finish recording the announcement, press the REC/TEST FLASH button again.

REC/TEST FLASH



**(NOTE)**

This adds a one-second beep to the end of the outgoing message. The RT-200 will automatically playback the announcement you have recorded. Adjust the VOLUME control as desired.

4. If you wish to remake the announcement, press the REC/TEST FLASH button and try again.

**(NOTE)**

You may record the announcement as many times as you like. Each time you record, the previous announcement is automatically erased.

#### *SAMPLE ANNOUNCEMENTS*

Sound cheerful and natural. Be sure your announcement is not abrupt. Your callers need an explanation of what you want them to do, and then they may require a couple of seconds to think over their response.

**EXAMPLE:**

"This is John Smith. I can't answer the phone right now. When you hear the tone, please leave your name, phone number, and message, and I will call you back as soon as I can. Thank you."

## ANSWERING OPERATION

"This is the Smith residence. I can't get to the phone right now, but I will be happy to return your call if you leave your name and telephone number after you hear the beep. Please speak clearly and directly into the telephone. Thank you."

### EXAMPLE FOR AUTO-PAGE:


"This is John Smith. I can't get to the phone right now, but I will be happy to return your call within 10 minutes if you leave your name, telephone number, and message after you hear the beep. Thank you."

### PLAYBACK THE OUTGOING ANNOUNCEMENT

1. Press the ANSWER button.



2. Press the REC/TEST FLASH button. You will hear the announcement from the speaker.

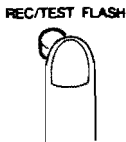

3. Press the RESET button when FINISHED.



### WHEN YOU ARE GOING OUT (ANSWERING CALLS)

1. Press the ANSWER button.



(The tape returns to the beginning of the tape position and now the MessagePhone is ready to receive a call. Be sure that the ANSWER lamp stays lit when you are going out.)

#### (NOTE)

- A. If the IN-USE lamp blinks when you press the ANSWER button, the Remote Security Code might not be entered in the memory. If so, enter the Remote Security Code.
- B. The MessagePhone will not answer any call if the message tape is fully occupied.
- C. If the MessagePhone has received a message, it will answer at the first ring. If no new message has been received, it will take three rings to answer. (TOLL SAVER FEATURE).


## ANSWERING OPERATION

### WHEN YOU RETURN (PLAYING BACK INCOMING MESSAGE)

If the ANSWER lamp is blinking when you return home, you have received at least one call, or new messages have been recorded since the last time you called in. If no new messages are recorded, the ANSWER lamp will stay lit. Release the ANSWER mode by pressing the RESET button.


#### To playback the incoming messages:

1. Press the RESET button.

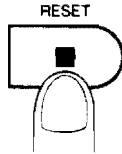

The ANSWER lamp turns off.

 2. Press the PLAY button.

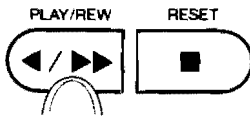


The messages are played back through the speaker after the tape rewinds to the beginning of the tape.


3. After all messages are played back, you will hear several short beep tones and stops automatically.
4. If you want to listen to the same messages once more, press the PLAY button again. The messages can be played back once again from the beginning.

### WHEN YOU WANT TO REWIND OR TO PAUSE DURING PLAYBACK

 1. Press and hold the PLAY/REW button during the playback of the message.

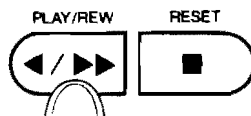

 
2. When you think the tape has reached the approximate position, release the PLAY/REW button. Normal playback will resume.
3. If you press the RESET button during the playback of message, the tape stops at that position until you press the PLAY button again. With the PLAY button pressed again, normal playback resumes from that position.

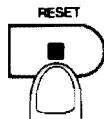

## ANSWERING OPERATION

### RECORDING A TELEPHONE CONVERSATION

1. Press the RESET button.

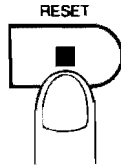

2. Press the MEMO/2-WAY button located right side of the unit while you are talking over the phone. The IN-USE lamp turns on while a conversation is being recorded.



3. When you want to discontinue the recording, press the MEMO/2-WAY button once again, or hang up.



**(NOTE)**

- A. To play back the message, refer to the "WHEN YOU RETURN" section.
- B. You can not record a 2-way conversation in the ANSWER mode.

### MONITORING A CALL BEFORE YOU ANSWER


1. Press the ANSWER button. Set the Volume Control to a suitable sound level.



2. When a caller calls in, you will hear the outgoing message (announcement) and then the caller's voice while he is leaving his message through the speaker.



3. If you want to talk with the caller, just pick up the phone and talk with him as you would normally.


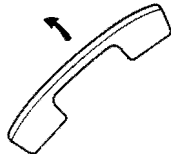


## ANSWERING OPERATION



### KEEPING THE RECORDED MESSAGES

To retain the old messages and still take the new messages while you are out, the best way is to use the other side of the tape. However if you want to use the same side of the tape:


1. Press the PLAY button and let the tape play on until you hear the last message you wish to keep.
2. Press the RESET button and remove the incoming message tape.

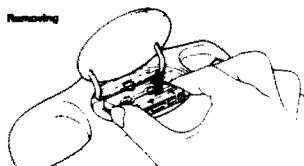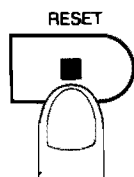

 3. Press the hook switch and the ANSWER button simultaneously.

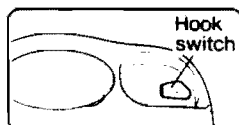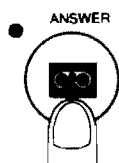

4. Insert the incoming tape.

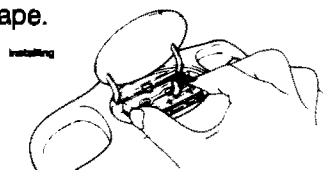

### USING AS A MEMO RECORDER

You can use the MessagePhone as a memo recorder to leave a message for your secretary, family or friend like an electronic bulletin board, on the incoming message tape. The message will be played back even from remote location using the remote control operation.

To record memo message:

1. Press the ANSWER button.



The ANSWER lamp turns on.

2. Press the MEMO/2-WAY button. Speak your memo message into the Microphone when the RECORD lamp turns on.



3. When the recording has been completed, press the MEMO/2-WAY button again. The RECORD lamp will turn off.

 
## ANSWERING OPERATION

---

### PLAYING BACK MEMO MESSAGE

The ANSWER lamp blinks when a memo message is recorded on the tape.

1. Press the PLAY button without pressing the RESET button.

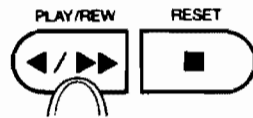

**(NOTE)**

The tape automatically rewinds, you will hear memo message and incoming messages if received during your absence. After all the messages are played back, you will hear several short beep tones and stop.

2. If you want to repeat, press the PLAY button again. Successively, the MessagePhone goes into the ANSWER mode.

**(NOTE)**

- A. Don't press the RESET button when you play memo message. If you press the RESET button, the ANSWER mode will be cancelled at the same time.
- B. Quick rewinding and fast forwarding are also possible during playback.

## REMOTE CONTROL OPERATION

---

### 6.REMOTE CONTROL OPERATION

You can control your MessagePhone remotely from any Touch-Tone phone without any beeper or from any Pulse Dial Phone using a pocket Tone Dialer.

#### REMOTE CONTROL PLAYBACK

You can control your MessagePhone remotely from any touch-tone phone without any beeper or from any pulse dial phone using a pocket tone dialer.

1. Call your phone number to which the MessagePhone is connected.
2. The MessagePhone answers a call at first ring if the MessagePhone has received at least one message. When the MessagePhone does not answer at first ring, you can hang up before third ring, knowing that there are no additional messages since the last time you checked. (Toll-Saver feature).
3. You will hear the outgoing announcement.
4. While the announcement is sounding, enter your security code. Press the Dial button on the telephone or Tone Dialer.  
If code is correct, the MessagePhone will emit a long beep of about 4 seconds, and stop the outgoing announcement. If this does not take place, try sending the security code again.
5. The MessagePhone will automatically rewind the incoming message tape to the beginning of the new messages and start playback.
6. When the tape reaches the end of messages, the MessagePhone sounds an intermittent beep for 4 seconds. The MessagePhone is then silent for 10 seconds.
7. You can command the MessagePhone to do various tasks during this 10 seconds command state. If you do not send any command, as when the call is accidentally disconnected, the MessagePhone will emit a final beep of 2 seconds and disconnect the call.

**(NOTE)**

When no new message is recorded on the tape under remote control playback, you will hear the intermittent beep soon after the playback has been started.

#### **REWIND – Key 1**

To play back the previous few seconds of the incoming tape, press the Dial button 1 during playback. The tape rewinds as long as the button 1 is pressed. With the button 1 released, normal playback resumes at that position.

---

## REMOTE CONTROL OPERATION

---

### **REWIND TO BEGINNING OF THE MESSAGE – Key 2**

If you want to listen to the messages again from the beginning of the tape. Press the Dial button 2 during playback.

The tape rewinds to the beginning of the tape and plays back the messages from the beginning. While the tape is rewinding, an intermittent beep tone will be heard.

#### **(NOTE)**

- A. Some telephone sounds a very short tone even if a Dial button is pressed for long time. In this case, rewind or fast forward of the tape by remote control is practically difficult because the button should be pressed many times repeatedly. Therefore press the Dial button 2 instead and listen to the message from the beginning of the tape.
- B. The MessagePhone will disregard the Dial button remote command during the period that the message end beep sounds. Therefore press the Dial button after the beep disappears.

### **OTHER USEFUL REMOTE CONTROL FUNCTIONS**

When the MessagePhone reaches the end of the messages, an intermittent long beep sounds. The MessagePhone is then silent for 10 seconds. You can command the MessagePhone to do various tasks during this 10 seconds which we call "COMMAND MODE". When you press two buttons in sequence, press continuously without pause in between. Pause will make a function disable.

### **NEW ANNOUNCEMENT RECORDING – Key 4 #**

You can change the outgoing announcement from a remote location.

1. During 10 second COMMAND MODE, press the Dial button 4# in sequence.
2. You will hear an intermittent beep while the outgoing announcement tape rewinds. When the rewind is completed, a long beep of 4 seconds will sound. This is the signal to start your new outgoing announcement.
3. When the tone stops speak your new announcement into the phone.
4. When you complete the announcement, press the Dial button 4. You will hear a 2-second beep tone. The tape automatically rewinds and then plays back your new announcement.

#### **(NOTE)**

If you are not satisfied with your new announcement, return to Step 1 and proceed to other steps.

## REMOTE CONTROL OPERATION

---

### SETTING OR RESETTING THE ANSWER MODE – Key 5#

To set the answer mode:

1. Call the MessagePhone.  
The MessagePhone will answer after 45 seconds through 75 seconds.
2. Enter your security code.
3. During 10 seconds COMMAND MODE, press the Dial button 5# in sequence.  
A 4-second beep informs you that the MessagePhone is ready to receive a call.

To reset the answer mode:

1. During 10 seconds COMMAND MODE, press the Dial button 5# in sequence.  
You can hear an intermittent beep.
2. You will hear an intermittent beep for 2 seconds while the tape rewinds and then final beep for 2 seconds to disconnect the line. The message tape is rewound to the beginning and new message will be recorded from the beginning of the tape.

### TURNING OFF THE ANSWER MODE – Key 5\*

To turn off the answer mode:

1. During the 10 second COMMAND MODE, press the Dial button 5\* in sequence.  
You can hear an intermittent beep.

### MEMO RECORDING – Key 6

If you want to leave a memo for your secretary or your own reminder after you have heard all the message.

1. During the 10 seconds COMMAND MODE, press the Dial button 6.
2. After an intermittent beep sounds, speak your message over the phone. Your message will be recorded on the incoming message tape.
3. When you finish speaking, hang up the phone.

### AUTO-PAGE FUNCTION REMOTE SETTING \*\* – Key 8# or 8\*

When you want to turn the auto-page function on or off from a remote location.

1. During 10 seconds COMMAND MODE, press the Dial button 8# in sequence to turn the auto-page function ON.  
You will hear a continuous beep sound for 4 seconds.
2. Press the Dial button 8\* in sequence to turn the auto-page function OFF. You will hear an intermittent beep sound for 4 seconds.

#### (NOTE)

Mark \*\* after the title above means that you can command other tasks successively using COMMAND MODE you may have again after the previous command.

**8. AUTO-PAGING OPERATION**

When you are out, the auto paging function of the MessagePhone will page you immediately after it records an incoming call sounding your pocket pager (if paging service is available in your area) to retrieve the messages and return the call if necessary.

First you will set the auto-page function to PHONE/PAGER or OFF, then enter the auto-page phone number.

**AUTO-PAGING A POCKET PAGER**

**To set the auto-paging function:**

1. Press the RESET button
2. Press the \* button.
3. Press the SPEED DIAL button.
4. Press the DIAL buttons 8 and then 0 after the beep sound.
5. Press the SPEED DIAL button again.

**(NOTE)**

A. If the PAGE lamp flashes when the ANSWER button is pressed, it tells the Pocket Pager's phone number has not yet been entered.

B. Calls are made up to 3 times before remote playback is made. Interval of calling is 15 minutes.

C. Paging is activated when the incoming message is recorded on the tape for more than 3 seconds.

**To page a telephone:**

Press the dial button 8 and then 1 at Step 4 of the previous section.

**(NOTE)**

In case of calling a telephone, you will hear an identification tone (intermittent beep tones) through your telephone receiver for 15 seconds. During this, you will send remote commanding signal (Security Code), and you can retrieve the recorded messages.

 
**To reset the auto-paging function:**

Press the DIAL button 8 and then \* at Step 4 of the setting procedure.

**9. TELEPHONE OPERATION**

**ON-HOOK DIALING**

1. Press the ON-HOOK/HOLD button with handset still on the unit.

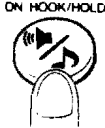

- Adjust the Volume Control for a suitable sound level.
- You will hear a DIAL TONE from the speaker.
- ON-HOOK lamp turns on.

2. Push the Dial buttons corresponding to the phone number you wish to call.



- You will hear the Ring Back Tone from the speaker.

3. When you hear a response from the speaker, pick up the handset and talk to the other party as you do with any telephone.



- While the call is connected, the ON-HOOK lamp stays lit.

**(NOTE)**

- A. The ON-HOOK DIALING will not function during power interruption or non-connection with main power source.
- B. If you want to cancel dialing, press the ON-HOOK button once again.
- C. Adjust speaker's sound level by VOLUME knob located on the right side of the unit.

 
**SPEED DIALING**

To dial out a stored number:

1. Press the ON-HOOK button, or pick up the handset.



2. Press the SPEED DIAL button.

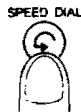

3. Press the speed dial number 0 - 9 or #

**(NOTE)**

- A. You will hear a speed dial call with Step 2 and 3.
- B. If you want to discontinue the dialing, press the ON-HOOK button.

## TELEPHONE OPERATION

---

### ONE-TOUCH DIALING

To dial out a stored number:

1. Press the ON-HOOK button, or pick up the handset.



2. Press the / or // button.

### REDIALING

When the called party is busy, you can redial the number that was dialed last at a touch of the REDIAL button.

1. Press the ON-HOOK button, or pick up the handset.



2. Press the REDIAL button. Dial automatically the number you called last.

#### **(NOTE)**

- A. You can also redial with Step 2 only.
- B. The redial feature is limited to the telephone number of no more than 32 digits.
- C. Do not press the REDIAL button while you are talking to the other party to secure the conversation.

### MUSIC ON HOLD

1. Press the ON-HOOK/HOLD button when you wish to hold.



2. Hang up the handset.



3. Pick up the handset to resume conversation.



## TELEPHONE OPERATION

### HANDS-FREE CALL

You can talk through the microphone while listening to the party from earphone.

#### To make a call:


Put on the earphone in advance.

1. Press the HANDS-FREE button.



- \* The 2-WAY lamp (red) comes on.
- \* You hear a tone from the earphone.

2. Dial the party's telephone number.

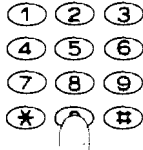

3. When the party answers, speak to the microphone 12 - 20 inches away from it.



- \* You hear the party from the earphone.

4. Press the HANDS-FREE button again when you finish the call.



- \* The 2-WAY lamp (red) goes out.

#### (Note)

- A. Press the HANDS-FREE button again to cancel dialing.
- B. Adjust the sound volume of the earphone with the volume switch.
- C. Be sure to press the HANDS-FREE button and confirm that the 2-WAY lamp (red) goes out, when you finish the hands-free talk.

## TELEPHONE OPERATION

---

### To receive a call

1. When a call comes in, the calling bell rings and the 2-WAY lamp blinks.



2. Put on the earphone and press the HANDS-FREE button. You can talk with hands free.

HANDS-FREE



3. Press the HANDS-FREE button again when you finish the hands-free call.

HANDS-FREE



\* The 2-WAY lamp (red) goes out.

### To switch between the hands-free call and handset call

(A) Changing from the handset call to the hands-free call:

1. Press the HANDS-FREE button and hang up the receiver.

(B) Changing from the hands-free call to the handset call:

1. Pick up the handset and talk through it.

\* The hands-free talk is automatically cancelled.

#### (NOTE)

Your voice may not be transmitted well, when the background is noisy or echoes.

Change to a telephone call using the handset.

Be sure to press the HANDS-FREE button when you finish the hands-free call.

Confirm that the 2-WAY lamp goes out.

**Telecom**

**Telecom Corporation of New Zealand Limited**